

ASSEMBLY

A9235 PRO SPEAK EVO
FOR AVALON X




Remove the cheekpads as indicated in the helmet user manual.



Place the right speaker (R) in its seat after applying the adhesive round shaped Velcro included in the package.



Repeat the operations performed for the right (R) speaker for positioning the left (L).

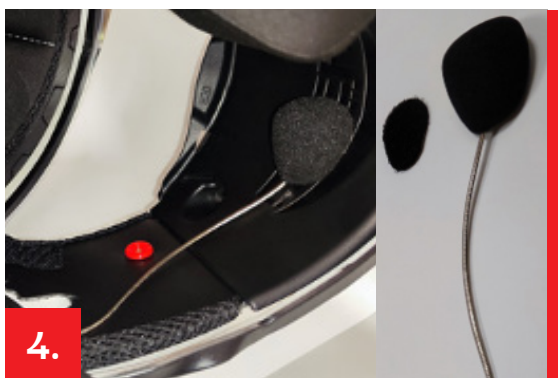

Place the microphone with wire on chin cover after applying the adhesive Velcro included in the package.

ASSEMBLY

A9235 PRO SPEAK EVO
FOR AVALON X



5.

House the speaker's cable (connecting the right speaker to the left) behind the rear cushion.



6.

Place the BT controller in the designated slot on the back of the inner shell.



7.

Place the USB socket between the removable cheekpads and the rear cushion.



8.

During the comfort cheekpads assembling, pass the flat cable of the remote control between the cheekpads's pp plate and the shell. The remote control must remain accessible outside the helmet.

ASSEMBLY

A9235 PRO SPEAK EVO
FOR AVALON X



Fit the keypad on the left side (helmet on), approximately 5 mm from the lower edge of the shell using the provided adhesive. Make sure that there is full contact surface between the adhesive keypad and the outer shell.