

ASSEMBLY

A9235 PRO SPEAK EVO
FOR DUKE EVO




Remove the cheekpads as indicated in the helmet user manual.



Place the right speaker (R) in its seat after applying the adhesive round shaped Velcro included in the package.



Repeat the operations performed for the right (R) speaker for positioning the left (L).

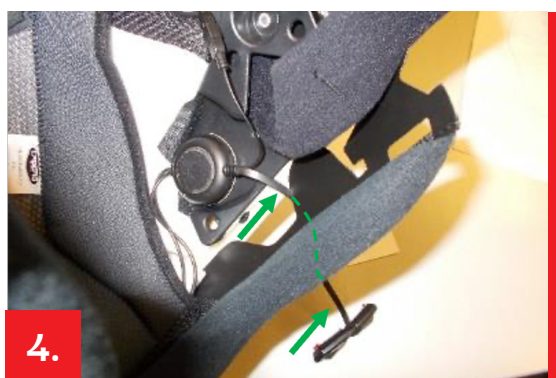

Pass the flat cable of the remote control between the neckroll's pp plate and the shell. The remote control must remain accessible outside the helmet.


ASSEMBLY

A9235 PRO SPEAK EVO
FOR DUKE EVO



5.

Position the microphone underneath the chinstrap by housing the boom in its seat.

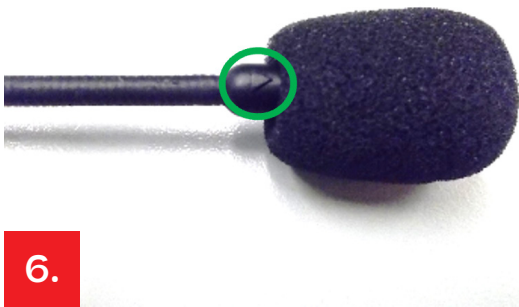

6.

Adjust the microphone's position by deforming its boom.

WARNING check that the triangle on the microphone is facing the mouth.



7.

Remove the inner liner. Place the cables in the gap between the inner and outer shell.



8.

Place the BT controller in the designated slot on the back of the inner shell.

ASSEMBLY

A9235 PRO SPEAK EVO
FOR DUKE EVO



Assemble the cheekpads. Place the USB socket between the cheekpad and the neckroll.



Fit the keypad on the left side (helmet on), approximately 30 mm from the lower edge of the shell using the provided adhesive. Make sure that there is no interference with the chin guard and full contact surface between the adhesive keypad and the outer shell.