

ASSEMBLY



Remove both cheek pads and place the cables under the rear cushion.



Place the right speaker (R) behind the cheek pad at the holes using the velcro on the back of the speaker.



Repeat the operations for the right speaker (R) to position the left (L).




Snap in the cheek pad's buttons on both sides paying attention to not "pinch" the cables".

ASSEMBLY



Attach the microphone on the comfort padding with the Velcro on the back of the microphone base.

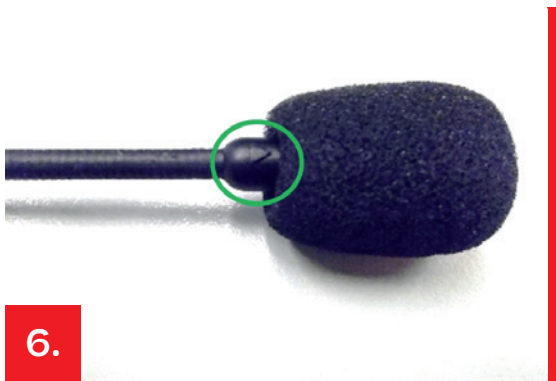

Adjust the microphone's position by deforming its boom.

WARNING check that the triangle on the microphone is facing the mouth.



Place the BT controller in the designated slot on the back of the inner shell.



Place the USB socket between the removable cheek pads and the comfort padding.

ASSEMBLY



9.

Fit the keypad on the left side (helmet on), approximately 10 mm from the lower edge of the shell using the provided adhesive. Make sure that there is no interference with the chin guard and full contact surface between the adhesive keypad and the outer shell.